

KEPH-BMS-C01

Adattatore BMS per inverter KEPH e batteria BLF-G (pin-out GSL)

PINOUT Connettori BMS-Link "TO BMS":

1. +5Vdc
2. +5Vdc
3. RS485 B
4. RS485 B
5. RS485 A
6. RS485 A
7. GND
8. GND

PINOUT Connettori Batteria

Connettore RJ45 "CAN / RS485":

1. RS485 B2
2. RS485 A2
3. GND
4. CANH
5. CANL
6. GND
7. RS485 A2
8. RS485 B2

